


DATE: JULY 16, 1999

AUTHOR: PAUL TOLLAR

# Carlyle Technical Bulletin 99T-7

## 5F Compressors With Oil Cooler Connections

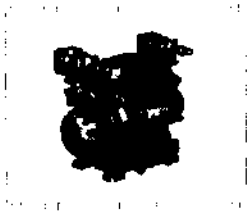

Carlyle Compressor has seen an increased demand for 5F compressors in applications requiring oil coolers. This includes higher compression ratios with R-22 and low temperature applications with other alternate refrigerants. In the past, the customer was required to order a special oil pump and bearing head assembly to allow the addition of an oil cooler.

Installation with the new special bearing head

Please note that this change will not result in a new

compressor part number. Customers will begin receiving these new compressor models automatically as our inventory is depleted.

When using an oil cooler, the customer must still add a 7/16 set screw as covered in our accessory oil cooler installation instructions. This is required to divert oil to the oil cooler. For complete installation instructions of the oil cooler, catalog number 530-522 should be reviewed.